

# Dcs2008 Software One By One

1. Double click on SetUp.exe to run the installation program.
2. If the installation program fails to start, copy the program to local disk manually.  
If installation successful, directly go to 10
3. Copy following files into system folder. For instant : windows\system (windows xp)  
ComCtl32.dep  
ComCtl32.Dll  
Comctl32.Oca  
ComCtl32.Ocx  
ComDlg32.Ocx  
DogSetup.Dll  
UmhControl.Ocx  
Comm\_2007.Ocx  
MsComm32.Ocx  
MsComCtl.Ocx  
TabCtl32.Ocx  
Vb5db.Dll  
Ding.Wav  
Mci32.Ocx
4. Copy following files into system Font folder. For instant : windows/Fonts (windows xp)  
SIMYOU.TTF
5. Create a subfolder of 3N\_2000 under C:, copy following files into it  
Prt\_Dcs2008.exe  
SLHuiSuan.exe  
EditRecord.exe  
ShaoJieFenXi.exe  
SetSystemMaterial.exe  
StationDefine.exe  
ShiftDefine.exe  
SetUserTitle.exe  
SetRunPassWord.exe  
SetCommPara.exe  
SetAdminPassWord.exe  
InputRunPassWord.exe  
InputAdminPassWord.exe  
Dcs\_System  
RiBaoPrint.exe  
YueBaoPrint.exe  
UserName.txt

AdminPassword.txt  
RunPassword.txt  
RiBaoBook000\_3N2000.xls  
RiBaoBook100\_3N2000.xls  
RiBaoBook200\_3N2000.xls  
EnglishRiBaoBook000\_3N2000.xls  
EnglishRiBaoBook100\_3N2000.xls  
EnglishRiBaoBook200\_3N2000.xls  
RiBaoBook000\_3N2000.xls  
RiBao20Book000\_3N2000.xls  
RiBao20Book100\_3N2000.xls  
RiBao20Book200\_3N2000.xls  
EnglishYueBaoBook000\_3N2000.xls  
YueBao20Book000\_3N2000.xls  
YueBaoBook000\_3N2000.xls  
3N 2000.bmp  
belt.bmp  
luoxuan.bmp  
panel.bmp  
panel.Gif  
Panel\_1.Gif  
dsc.bmp  
Title\_System.txt  
Title\_System.txt

6. Copy following files to C:

Dcs2008.exe  
3N2000.ico

7. Copy following file to your desktop

Dcs2008.lnk

8. Create a subfolder under C:\3N\_2000 for workstation. For instant, workstation=0405\_1, Create a subfolder named 0405-1 under C:\3N\_2000

9. Run program \dog\_drv\drv\_all\instdrv.exe to install assistant U drive

10. Restart system

11. Insert the assistant U drive, double click the shortcut icon “Dcs2008”

12. Configure workstation

SystemConfig => StationDefine, please check the instruction for details.

13. Configure report shift

SystemConfig = Report Style, please check the instruction for details.

14. Configure material name

SystemConfig => Material Define, please check the instruction for details.

15. Change administrator password and operator password, two passwords can be same, but if not, Administrator password has higher priority.

16. Double click on workstation icon to enter the workstation. Right click on each terminal icon to set terminal parameter.

type: icon type. Online: online or not. Material: choose material.

At least one terminal is online.

17. Set communication parameter

SystemConfig=> Comm Parameters

The information about Com port can check system device manager. Baud rate must be same as terminals' setting. As an example of 0405: check the E9 parameter E9=0: 2400. E9=1: 4800. E9=2: 9600. E9=3: 19200

Every time communication parameters changes, must exit the program and restart it

18. If the workstation icon is flashing, the communication starts. Yellow color: System calls. Green color: Terminals answers.

19. Double click the icon to enter the workstation.

20 Please check the instruction for further operations.